


GB AWM 1403

A. "On/Off" Button

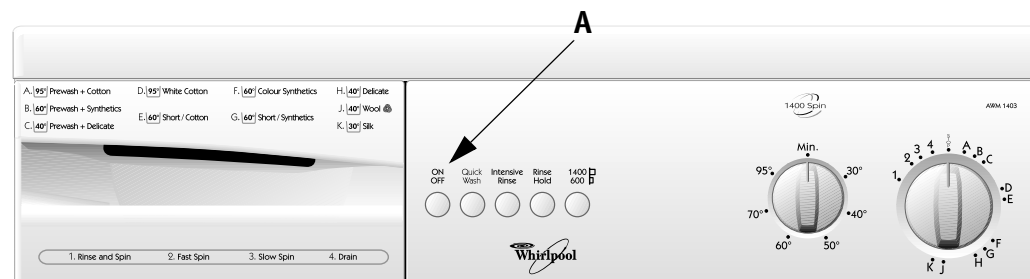

During the selected washing programme the programme selector knob moves by steps clockwise through the phases *prewash*, *main wash*, *rinse* and *spin*. Each step takes from some seconds to several minutes.

* : optional / Yes : dosing required

- 1) For improved garment care spin speed is restricted to 900 rpm in this programme.
- 2) For improved garment care spin speed is null in this programme.

Programme	Care Labels	Type of wash/Notes	Max Load Kg	Detergents and additives			Special options				Temperature Selector °C	Programme Selector
				Softener	Main Wash	Pre-wash	Quick Wash	Intensive Rinse	Rinse Hold	Spin Speed Reduction 1400 600		
Prewash + Cotton		Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	5.0	*	Yes	Yes	—	*	*	*	Max. 95°	A
Prewash + Synthetics		Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	Yes	—	*	*	* 1)	Max. 60°	B
Prewash + Delicates		Heavily soiled curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	Yes	—	—	*	* 1)	Max. 40°	C
White Cotton	 	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>When you select the "Quick Wash" option, the "Intensive Rinse" option cannot be selected.</i>	Normal 5.0 Quick Wash 3.0	*	Yes	—	*	*	*	*	Max. 95° Quick Wash Max. 60°	D
Short/Cotton	 	Slightly soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	*	Yes	—	—	*	*	*	Max. 60°	E
Colour Synthetics	 	Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. <i>When you select the "Quick Wash" option, the "Intensive Rinse" option cannot be selected.</i>	Normal 2.5 Quick Wash 1.5	*	Yes	—	*	*	*	* 1)	Max. 60° Quick Wash Max. 60°	F
Short/Synthetics		Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	2.5	*	Yes	—	—	*	*	* 1)	Max. 60°	G
Delicate	 	Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	—	—	—	*	* 1)	Max. 40°	H
Wool		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	*	Yes	—	—	—	*	* 1)	Max. 40°	J
Silk	—	Textiles made of linen, silk, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. No spinning.</i>	1.0	*	Yes	—	—	—	*	* 2)	Max. 30°	K
Rinse and spin	—	<i>With this programme you can add starch and/or fabric softener. The programme ends with a fast spin cycle.</i>	5.0	*	—	—	—	*	*	*	—	1
Fast Spin	—	<i>In this programme spinning is fast. Same as the spin cycle in the "Cotton" programme.</i>	5.0	—	—	—	—	—	—	*	—	2
Slow spin	—	<i>In this programme spinning is slow. Same as the spin cycle in the "Wool" programme.</i>	1.5	—	—	—	—	—	—	* 1)	—	3
Drain	—	<i>Drain only - no spinning. Alternative method of terminating programme the synthetic, delicate and wool programme and for premature removal of the laundry.</i>	—	—	—	—	—	—	—	—	—	4

Whirlpool is a registered trademark of Whirlpool USA.

5019 301 05446/A

CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours:minutes)
Cotton	90	5.0	49	1.90	2:00
Cotton	60	5.0	44	0.95	2:00
Cotton	40	4.5	44	0.60	2:05
Synthetics	60	2.5	55	0.80	1:30
Synthetics	40	2.5	55	0.60	1:20
Delicate	40	1.5	60	0.60	0:45
Wool	40	1.0	60	0.45	0:40
Silk	30	1.0	45	0.30	0:40

Prewash might increase programme duration. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergents as described in the programme table or in the chapter "Detergents and Additives" in the booklet.

1. Open the tap.
2. Set the **programme selector** to the desired programme.
3. Set the **temperature selector** to the desired temperature.
4. **Special options** can be selected.
5. Check that the door is well closed and turn on the washing machine by pressing the **"ON/OFF"** button.

SELECT ANY DESIRED OPTION

"Quick Wash" button

- For quick, economical washes.
- Ideal for minimum loads of lightly-soiled articles.

Note: reduce the detergent quantity.

"Intensive Rinse" button

- More water and a longer time in rinse cycle is added.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

"Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programme "Synthetics" or "Delicates".
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Terminate the "Rinse Hold" option:

- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.

If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme.

"Spin Speed Reduction" button

- Reduces the predetermined automatic maximum spin speed.
In some programmes the maximum final spin speed is limited to go easy on your laundry items. Selection of a higher spin speed is not possible.

PROGRAMME CHANGE

To reselect a programme when a cycle has already begun:

1. Switch off the appliance by pressing the **"ON/OFF"** button.
2. Select the new programme.
3. Start the programme by pressing the **"ON/OFF"** button.

PROGRAMME END

1. At the end of the programme the programme selector moves to the stop position.
2. To unload the machine wait for the door to unlock (about 1 minute).
3. Switch off the appliance, open the door and take out the laundry.
4. Close the tap and leave the door ajar to allow the drum to dry out.

NOTES AND INDICATIONS FOR USE

- **WATER LEVEL**
It may not be visible as the cycle is optimised for a minimum water consumption without compromising washing results.
- **SPIN SPEED CONTROL**
Spin speed may be reduced automatically or may even be excluded in the case of small loads with highly absorbent garments (e.g. bathrobes, bathmat).
This control avoids cloth and machine damage and excessive vibrations and consequent noise produced by the machine due to load unbalance: by selecting high spin speeds the noise level increases.
- **MOTOR NOISE**
The running noises of the new, electronically-controlled motor are not the same as the ones you are used to from your old appliance. Don't be surprised - modern technology has a modern sound.
- **CLEANING THE FILTER**
To ensure an impeccable function of the pump, check the filter regular and clean it if necessary.

HOT / COLD FILL INSTRUCTION

If you wish to connect hot and cold water supply (Fig.1):

1. Fix the red marked inlet hose at the hot water tap and at the inlet valve with the red filter on the rear side of machine.
2. Fix the other inlet hose at the cold water tap and at the inlet valve with the blue filter on the rear side of the machine.

Make sure:

- a) The connections are tightly fixed
- b) Do not invert their position (for example: cold fill into hot inlet valve and viceversa).

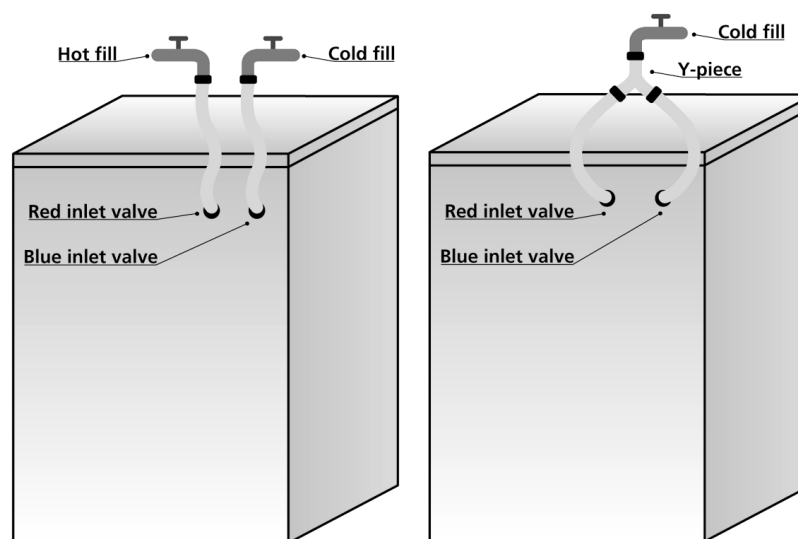


Fig.1

Fig.2

If you wish to connect only the cold fill follow the below instruction (Fig.2):

1. You need a Y-piece connector. The Y-piece connector can be ordered via our Service Organization or purchased in a specialized hydraulic component store.
2. Fix the Y-piece connector to the cold fill tap.
3. Connect the two inlet valves present on the rear part of the machine to the Y-piece connector using the relative provider hoses.

Make sure:

All connections are tightly fixed.

Do not allow children to operate, crawl on, near or inside your washer.

Note that during wash cycles, the surface temperature of the porthole door may increase.

Close supervision of children is necessary when the appliance is used near children.